


VX-VER170S QUICK START GUIDE

Hardware Connection

1. Use telephone line to connect the **DSL** port of the ADSL router to the **MODEM** port of the splitter. Use a separate telephone line to connect your telephone to the **PHONE** port of the splitter and then connect the wall phone jack to the **LINE** port of the splitter.
The splitter comes with three connectors as detailed below:
LINE: Connects to a wall phone jack (RJ-11 jack)
MODEM: Connects to the DSL jack of ADSL router
PHONE: Connects to a telephone set
2. Use an Ethernet Cable to connect the LAN port of the ADSL router to your LAN or PC with the network card installed.
3. Connect the power cable to the PWR connector on the ADSL router and then plug in the AC power adapter to the AC power outlet. Press the on-off button.

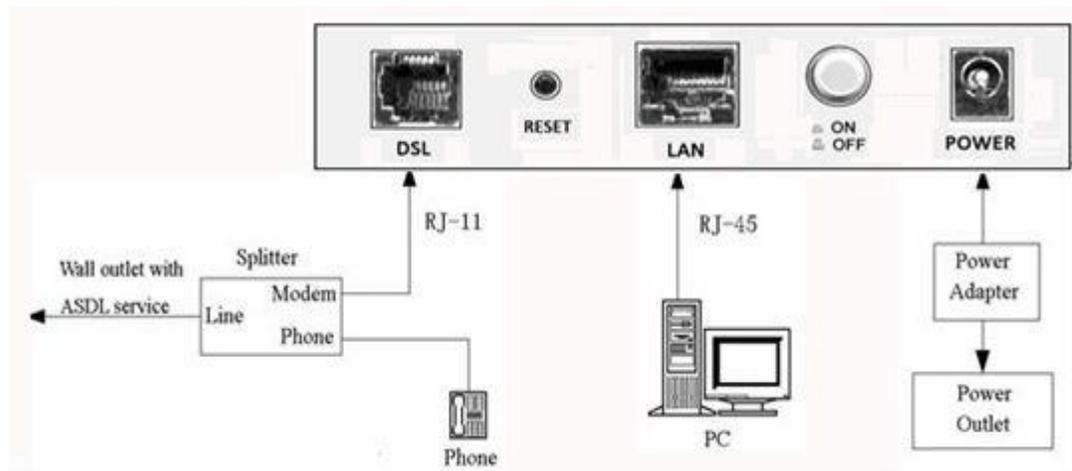

PC Configuration

Windows 95, 98, ME, XP


1. In the Windows task bar, click the “Start” button, point to “Settings”, and then click “Control Panel”.
2. Double-click the “Network” icon.
3. On the “Configuration” tab, select the TCP/IP network associated with your network card and then click “Properties”.
4. In the “TCP/IP Properties” dialog box, click the “IP Address” tab. Set the IP address as 192.168.1.x (x can be a decimal number from 2 to 254.) like 192.168.1.2, and the subnet mask as 255.255.255.0.
5. On the “Gateway” tab, set a new gateway as 192.168.1.1, and then click “Add”.

6. Configure the “DNS” tab if necessary. For information on the IP address of the DNS server, please consult with your ISP.
7. Click “OK” twice to confirm and save your changes.

Note: step 4 to 6 can be set to get IP address and DNS automatically also.

Access the program

After configuring the IP Address of you computer, power on the ADSL Router, and launch a web browser, such as Internet Explorer. Use <http://192.168.1.1> to log on to the setting pages. You will find you have been guided to the configuration page.

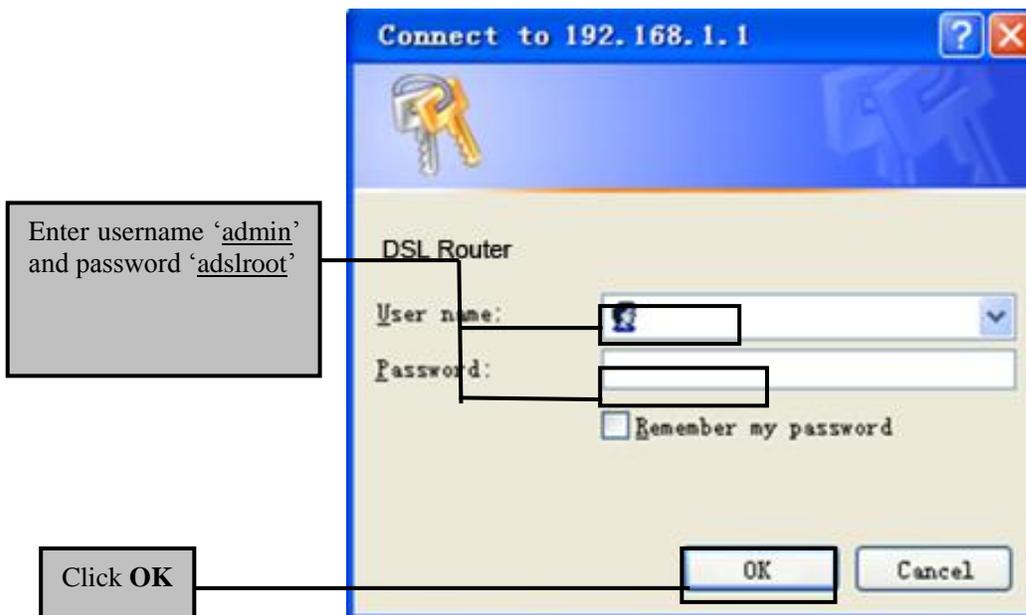

Attention: the username and password are both lowercase.

Quick Setup

1. Click “**Quick Setup**” on the left margin; enter into Quick Setup configuration page, then click “**Next**”

Quick Setup

The quick setup will guide you to configure access point for first time. Please follow the quick setup step by step.

The quick setup will guide you the through following steps. Begin by clicking on **Next**.

1. WAN Interface Setup
2. LAN Interface Setup
3. Summary

Next

2. Enter the information that **your ISP has provided** to you, then click “**Next**”.

WAN Configuration

This Quick Setup will guide you to do basic settings for DSL Router.

Select WAN service type: 

VPI: [0-255]

VCI: [32-65535]

PPP Configuration

In the box blow, please enter the user name and password that your ISP has provided to you.

PPP Username:

PPP Password:

Back Next

2. Configure basic features of the LAN interface, then click “Next”.

LAN Configuration

This screen allows you to configure basic features of the LAN interface.

IP Address:	<input type="text" value="192.168.1.1"/>
Subnet Mask:	<input type="text" value="255.255.255.0"/>
<input type="radio"/> Disable DHCP Server	
<input checked="" type="radio"/> Enable DHCP Server	
Start IP Address:	<input type="text" value="192.168.1.2"/>
End IP Address:	<input type="text" value="192.168.1.254"/>
Leased Time (hour):	<input type="text" value="24"/>

3. Make sure that the settings below match the settings provided by your ISP. Click on the “Apply/Save” button to save your configurations. Now quick setup is completed!

Quick Setup - Summary

WAN Settings	
Layer2 Interface:	ATM
PORT / VPI / VCI:	0 / 1 / 35
Connection Type:	PPPoE
NAT:	Enabled
Firewall:	Enabled
LAN Settings:	
LAN IP Address:	192.168.1.1
DHCP:	Enable
Start IP Address:	192.168.1.2
End IP Address:	192.168.1.254

Click "Apply/Save" to have the configuration to be effective. Click "Back" to make any modifications.